

HDL-M/R4.10.1
KNX 4CH 10A High Power Switch Actuator

HDL-M/R8.10.1
KNX 8CH 10A High Power Switch Actuator

HDL-M/R12.10.1
KNX 12CH 10A High Power Switch Actuator

HDL-M/R16.10.1
KNX 16CH 10A High Power Switch Actuator

Hardware Version: B

KNX®

Datasheet

Issued: August 6, 2020

File Edition: V1.0.1



Figure 1. 4CH 10A High Power Switch Actuator



Figure 2. 8CH 10A High Power Switch Actuator



Figure 3. 12CH 10A High Power Switch Actuator



Figure 4. 16CH 10A High Power Switch Actuator

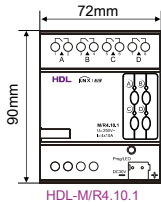


Figure 5. Dimensions - Front View

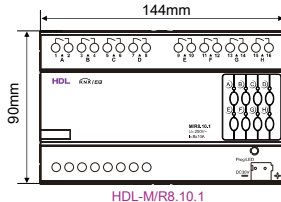


Figure 6. Dimensions - Front View

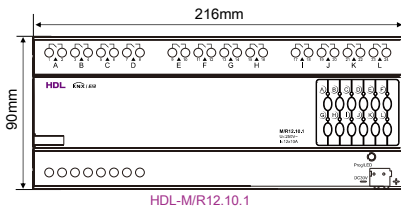


Figure 7. Dimensions - Front View

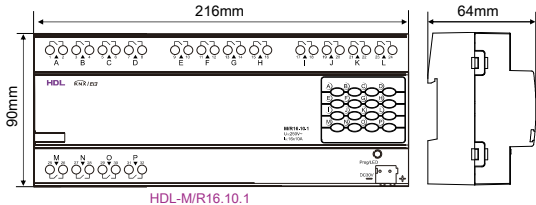


Figure 8. Dimensions - Front View




Figure 9. Dimensions - Side View

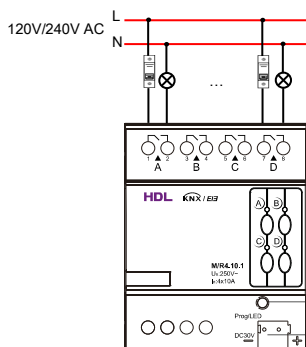


Figure 10. Wiring

Overview

KNX 10A High Power Switch Actuator (See Figure 1-4) includes 4 types (4CH, 8CH, 12CH and 16CH) of output circuits, and each channel outputs 10A current. With characteristics of long life, low power consumption and fast execution speed, this series of actuators are in full compliance with European KNX safety standards and protocols of high-power switching equipment.

Functions

- 10A High Power Switch Actuators include 4 types: 4, 8, 12 and 16 channels of actuator.
- Maximum output current of each channel: 10A.
- Control functions: Statistical ON time, Status response, Status recall, Staircase light, Flashing, ON/OFF delay, Protection delay, Scene control, Threshold function, Curtain control, etc.
- Logic function: AND, OR, XOR, Gate.
- Heating function: PWM(1bit/1byte) control output.

Important Notes

- Programming - This device is compliant with the KNX standard and can only be programmed by ETS software.
- Maximum output current of each channel: 10A, and a fuse/circuit breaker more than 10A should be connected to each channel for protection.
- Three phase connection - This series of actuators support 3 phase input, take the 12CH actuator as an example, CH1, 4, 7, 10 connect to L1. CH2, 5, 8, 11 connect to L2. CH3, 6, 9, 12 connect to L3.

Product Information

Dimensions - See Figure 5 - 9

Wiring - See Figure 10

1. Programming button/indicator:
Red LED indicates programming mode.
2. KNX/EIB interface.

Installation - See Figure 11 - 13 (Take HDL-M/R4.10.1 as an example)

- Step 1. Fix the DIN rail with screws.
- Step 2. Buckle the bottom cap of the actuator on the edge of the DIN rail.
- Step 3. Press the device on the DIN rail, slide it and fix it up until an appropriate position is adjusted.

Safety Precautions

- The installation and commissioning of the device must be carried out by HDL or the organization designated by HDL. For planning and construction of electric installations, the relevant guidelines, regulations and standards of the respective country are to be considered.
- The device should be installed in distribution box with DIN rail. HDL takes no responsibility for all consequences caused by installation and wire connection which are not in accordance with this document.
- Please do not privately disassemble the device or change components, otherwise it may cause mechanical failure, electric shock, fire or body injury.
- Please resort to our customer service department or designated agencies for maintenance service. The warranty is not applicable for the product fault caused by private disassembly.
- It is not allowed to exceed the range.
- CAUTION - Risk of Electric Shock - More than one disconnect switch may be required to de-energize the equipment before servicing.
- The marking appears on the device, shown below shall be used to indicate that the device is for use with copper wire. The marking shall be legible with letters at least 2.4 mm high. "Use copper wire only", "Cu wire only" or equivalent wording, or a marking containing both the symbols as the illustrations.



Package Contents

KNX 10A High Power Switch Actuator*1 / Label*5 / Datasheet*1



Figure 11

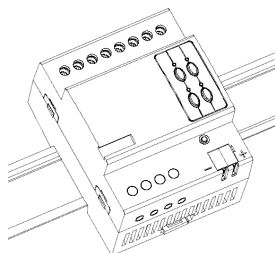


Figure 12

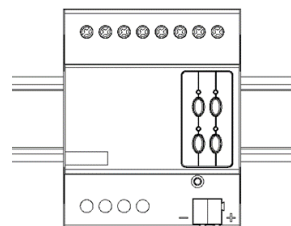


Figure 13

Figure 11 - 13. Installation

Technical Data

Basic Parameters

Working voltage	21~30V DC Class 2
Working current	15mA/30V DC
Input voltage	120V/240V AC (50/60Hz)
Communication	KNX
Cable diameter of KNX terminal	0.6-0.8mm
Rated switch current	10A lighting load, max inrush 500A
Operation times	>100,000
Line in/Line out terminals	2.5-4mm ²
Output channel	4CH/10A, 8CH/10A, 12CH/10A, 16CH/10A
Capacitance	<300μF

External Environment

Working temperature	-5°C~45°C
Working relative humidity	≤90%
Storage temperature	-20°C~60°C
Storage relative humidity	≤93%

Specifications

Dimensions	HDL-M/R4.10.1 90×72×64(mm) HDL-M/R8.10.1 90×144×64(mm) HDL-M/R12.10.1 90×216×64(mm) HDL-M/R16.10.1 90×216×64(mm)
Net weight	HDL-M/R4.10.1: 256g HDL-M/R8.10.1: 576g HDL-M/R12.10.1: 823g HDL-M/R16.10.1: 830g
Housing material	Flame-retardant nylon
Installation	35mm DIN rail installation (See Figure 11 - 13)
Protection rating (Compliant with EN 60529)	IP20

Recommended Load Types and Power

240V, 10A, Resistive, 100,000 cycles, 40°C;

240V, 1HP (8FLA/48LRA), Motor, 6,000 cycles, 40°C;

240V, 6A, Standard Ballast, 6,000 cycles, 40°C;

120V, 0.5HP (9.8FLA/58.8LRA), Motor, 20,000 cycles, 40°C;

120V, 10A, Electronic Ballast, 20,000 cycles, 40°C;

120V, 10A, Standard Ballast, 6,000 cycles, 40°C;

Name and Content of Hazardous Substances in Products

Components	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr (VI))	Poly-brominated biphenyls (PBB)	Poly-brominated diphenyl ethers (PBDE)
Plastic	o	o	o	o	o	o
Hardware	o	o	o	o	-	-
Screw	o	o	o	x	-	-
Solder	x	o	o	o	-	-
PCB	x	o	o	o	o	o
IC	o	o	o	o	x	x

The symbol "-" indicates that the hazardous substance is not contained.

The symbol "o" indicates that the content of the hazardous substances in all the homogeneous materials of the component is below the limit requirement specified in the Standard IEC62321-2015.

The symbol "x" indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in the Standard IEC62321-2015.

KNX Cable Guide

KNX	KNX Cable
-	Black
+	Red

Technical support

E-mail: hdltickets@hdlautomation.com

Website: <https://www.hdlautomation.com>

©Copyright by HDL Automation Co., Ltd. All rights reserved.
Specifications subject to change without notice.